

Safety instructions

Choose the location for the scooter stand also according to the following safety considerations:

The parked scooters, as well as the scooter stands themselves, must not obstruct any paths, especially escape routes, entrances and exits, roads or the like. Access and egress to and from the scooter stand must be unobstructed.

Where scooter stands are permanently mounted, the support material (wall or floor) must be suitable for mounting! Avoid consequential damage (e.g. damaged pipes or lines, broken out pieces of wall, cracked floor slabs) by proper planning!

Please read the installation instructions before installation.

The scooter stands are designed for the safe parking of pedal scooters, skateboards and/or bicycles of various designs.

We must expressly warn against any improper use!

Only assemble the scooter stands yourself if you have the necessary technical knowledge and have mastered the necessary skills to avoid any problems, damage and injuries resulting from assembly errors!

Observe the enclosed assembly instructions and these safety instructions!

We accept no liability for damage caused by incorrect or improper assembly or use, by a tradesman or customer.

Video-tutorial for mounting



<https://montage.rollerstop.com>

Contact

If you have any further questions or comments, we look forward to hearing from you

eSxBOB60 + TADAPT

Assembly instructions
for one eS module with T-
stand for embedding


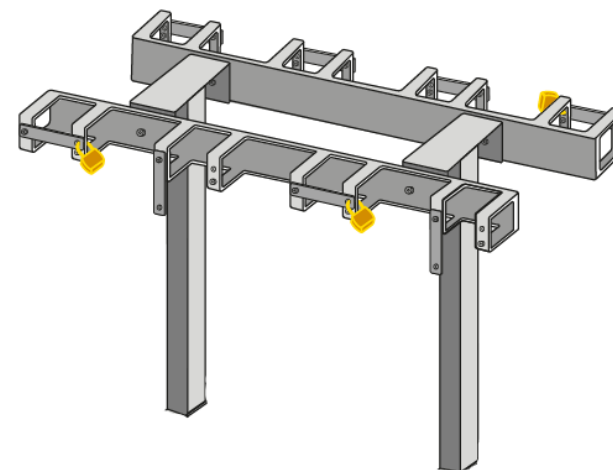


Illustration Assembly

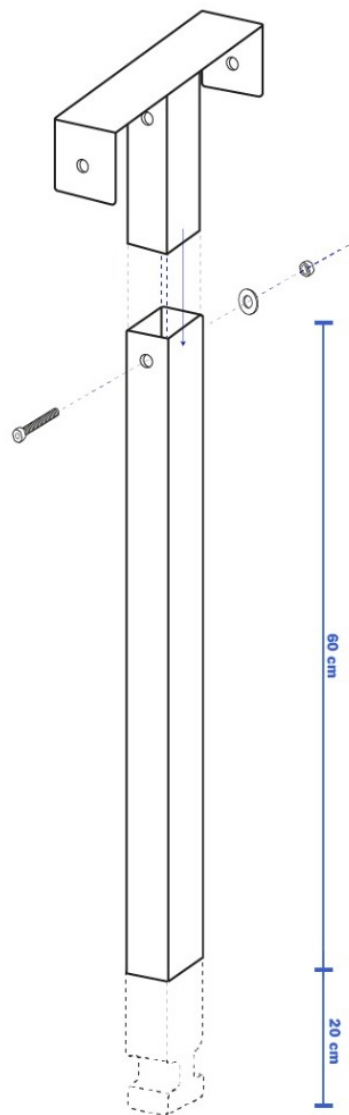

Description Assembly Pt. 1/2

Rollerstop scooter stands always consist of 2 elements: The module with the parking spaces (RS4, RS8, eS3, eS5, etc.) and the matching fastening elements (wall bracket, floor stud for screwing on or setting in concrete, bracket floor stud).

Mounting of a Rollerstop module from the eS series with a floor stand for embedding (item number eSx2TBOB60):

When mounting the module, make sure that the lettering on the closed locking bracket can be read correctly to avoid a module being mounted upside down by mistake.

Please observe the recommendations for the respective surface:

substrate	recommendation
Concrete	YES
Asphalt	YES*
Soil with foundation	YES**

A concrete foundation must be dimensionally adapted to the subsoil: the softer the subsoil, the larger/comprehensive the foundation.

* If the ground supports are to be embedded in an asphalt base-deck layer (coarse base asphalt approx. 10 or more cm thick), we recommend a concrete core with a diameter of at least 100 mm.

** Soil itself is unsuitable as a load-bearing substrate. To embed scooter stands with ground supports in concrete, a strip foundation of approx. 30 x 30 cm along the entire length of the parking facility is recommended.

Description Assembly Pt. 2/2

1. First, the T-adapter is connected to the floor stand: to do this, the T-element is inserted into the floor stand so that the holes are one behind the other. Now the M8x50 screw supplied is threaded through these holes; then the washer and the matching nut are placed on the back of the screw and screwed tight.
2. Now the mounting elements can be connected to the modules. To do this, the supplied mounting screws (M8 x 50) must be inserted from the front through the hole in the module and then through a hole on the lug of the T-bar.
3. The washer is then threaded onto the screw behind it and the nut is attached. This can now be screwed on loosely. Enough play remains for the module to be set up at right angles to the fastening elements.
4. Now the module can be brought into position and concreted in. Attention. The finished height of the roller stand must be 60 cm above the top edge of the ground!
5. Afterwards, all nuts and bolts are tightened with a wrench (size 13) until they can no longer be loosened by hand.

Important: If two or more modules are to be mounted next to each other (in series), a minimum distance of 9 cm must be maintained between the modules.

